

Security System

2007 Signature Series



The information printed here reflects product design, fabrication, and component parts at the date of printing. The manufacturer reserves the right, at any time, to make changes in product design or material or component specifications as its sole option, without notice. This includes the substitution of components of a different brand or trade name, which will result in comparable performance. All information printed in this document is subject to change after the date of printing. Due to product improvements, changes during the model year and/or transcription errors that may occur, information represented within the owner's manual and/or this document may not be accurate at the time of your purchase. Please confirm any information with your dealer.

The following information supercedes previous information and applies to certain model motorhomes equipped with a Roadmaster Chassis.

©Monaco Coach Corporation. All rights reserved. All other trademarks or registered trademarks are property of their respective holders. Brand name products of other companies mentioned in this addendum are not endorsed by Monaco Coach Corporation.

The following information supersedes the information printed in the 2007 Signature Owner's Manuals, on pages 53-54, under the "Security System" heading.

SECURITY SYSTEM

The security system includes a key fob, dash-mounted LED and a push button switch located on the dash or under the dash to the left of the steering wheel. The following information includes instructions for arming and disarming the security system. See the OEM manual for more information.

NOTE:

Monaco Coach Corporation does not warrant or guarantee against damage caused by break-in or theft of the motorhome, in part or in whole, or against the loss or damage to the contents thereof in which a security system is installed. The security system is only a deterrent against possible break in or theft.

Arming & Disarming

To Arm the System:

The system can be armed and disarmed with the key fob or the key pad on the entry door grab handle.

- ◆ Exit the motorhome and close all protected entrances. This includes the entry door, bedroom windows and all bay doors with pin switches.

With Key Fob:


- ◆ Press the "Lock" button on the key fob twice. This requires two hard pushes with a distinct pause in between. The system will beep one time and the dash-mounted LED will flash every two seconds when the system is armed.

With Key Pad:


- ◆ Press and hold the "Lock" button on the key pad (button #1 with lock symbol) for approximately two seconds until the entry door and bay doors lock. Release the Lock button. Within five seconds, press and hold the Lock button again for approximately two seconds. The system will beep one time and the dash-mounted LED will flash every two seconds when the system is armed.

To Disarm the System:

- ◆ Press the "Unlock" button on the key fob, or enter the unlock code on the key pad, to disarm the security system. The dash-mounted LED will turn off and the system will beep twice when disarmed.

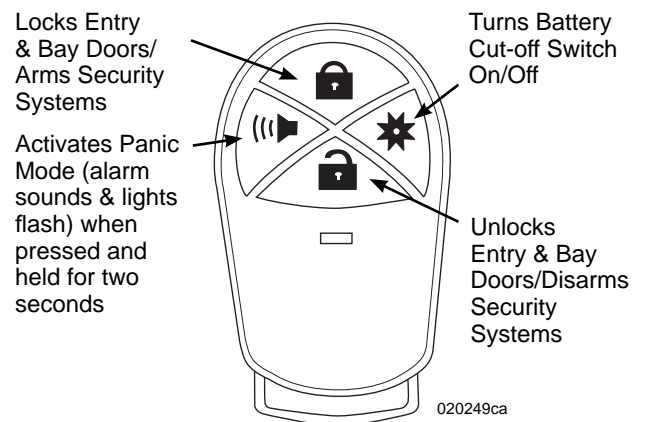

Security System Key Fob

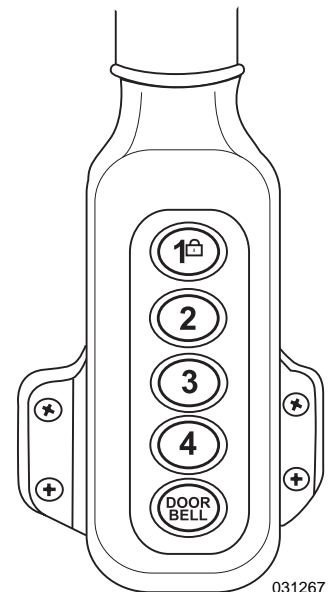

Key pad located on entry door grab handle.

Alarm

- ◆ Starting the engine, breaking bedroom glass and/or opening the entry door, bay doors with pin switches or a bedroom window will sound alarm. The horn/siren will sound and the parking lights and headlights will flash for 30 seconds. The LED will flash continuously.

To Turn Off Alarm:

- ◆ Press the Lock or Unlock button on the key fob, or turn the ignition on and hold the push button (located on the dash or under the dash to the left of the steering wheel) in for five seconds.

Sound and Window Sensors:

Two sound sensors are used to detect impact noise (repetitive or single heavy impact) and glass breakage. Sound sensors are located in the galley and in the bedroom. Window sensors are located on the bedroom windows only. These sensors detect window screen movement. If the screen is opened more than 1/2", the alarm will sound when the security system is activated.


Each sensor is equipped with a pair of replaceable batteries. Test the sound and window sensors monthly.

Testing Sound Sensor:

- ◆ Clap hands loudly next to sensor. LED should briefly illuminate twice.

Testing Window Sensor:


- ◆ Momentarily press on housing next to LED to briefly illuminate.

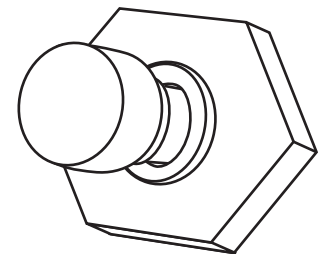

020249e

Push button located on the dash.

Push Button

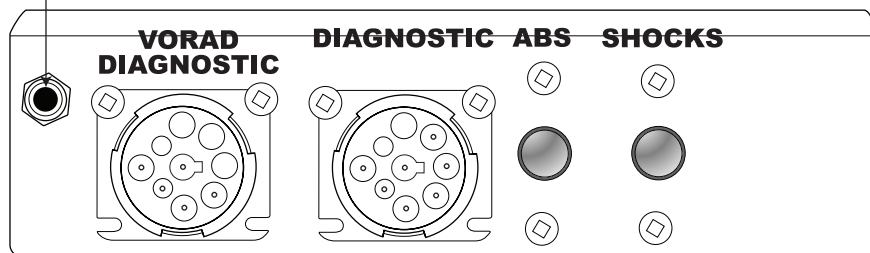

090304o

Push button is located under the dash to the left of the steering wheel.

Monaco Coach Corporation
91320 Coburg Industrial Way
Coburg, OR 97408
800-634-0855
www.monaco-online.com

Warranty/Technical Support
Toll Free 877-466-6226